


Basic Task (B)

SitOnIt • Seating®

CHAIR ADJUSTMENT INFORMATION

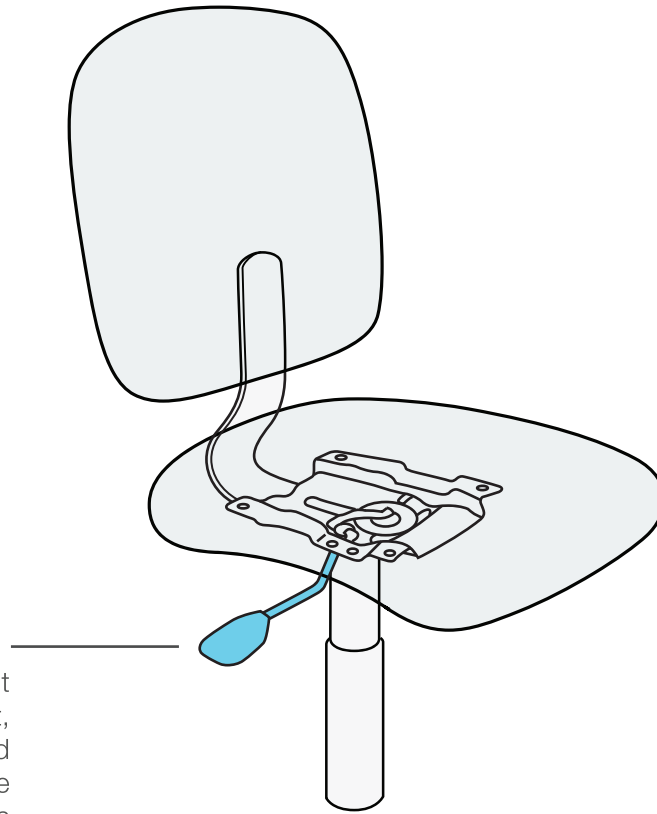

Pneumatic Lift

Easily adjusts to the perfect seat height. To raise the seat, lift your weight off the seat and pull up on the lever. Release lever when seat reaches desired height. To lower seat, lift up on the lever while you are seated; release lever when seat reaches desired height.

SitOnIt • Seating®